


# Trucheck2 Driver Installation for Windows 7

V1.0


Copy Trucheck2.inf to C:/Windows/System32/Drivers

Go to Device Manager

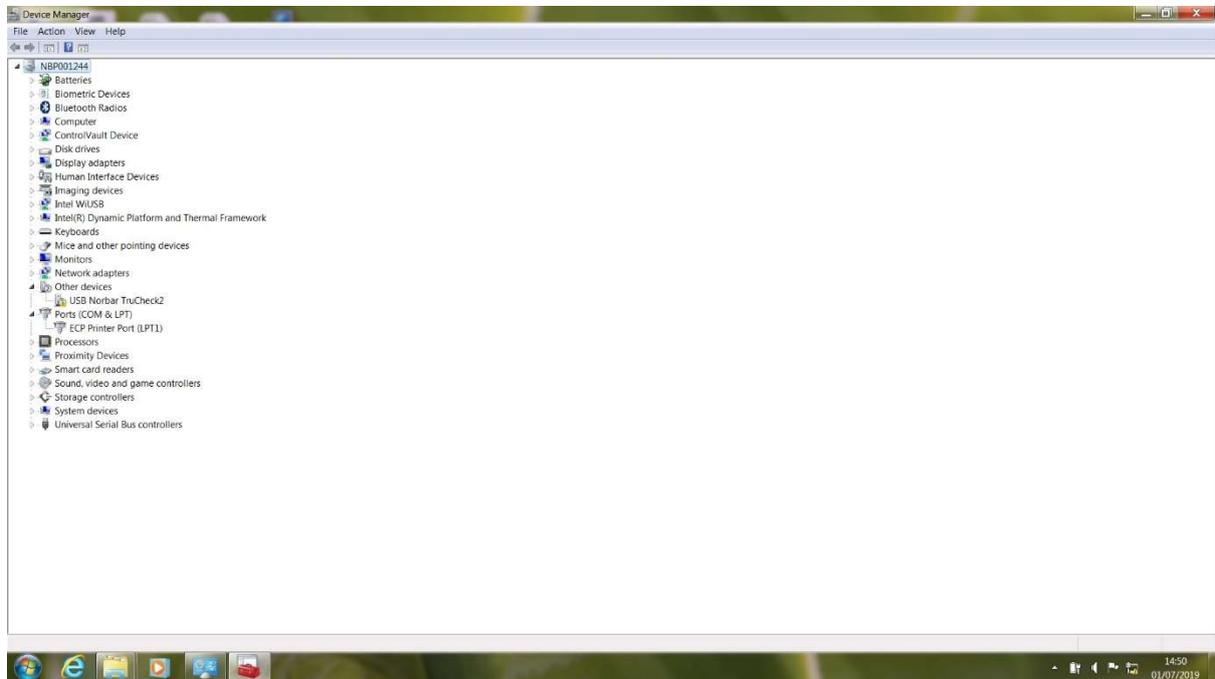


Right Click on 'USB Norbar Trucheck 2' and select properties

Click 'Update Driver'

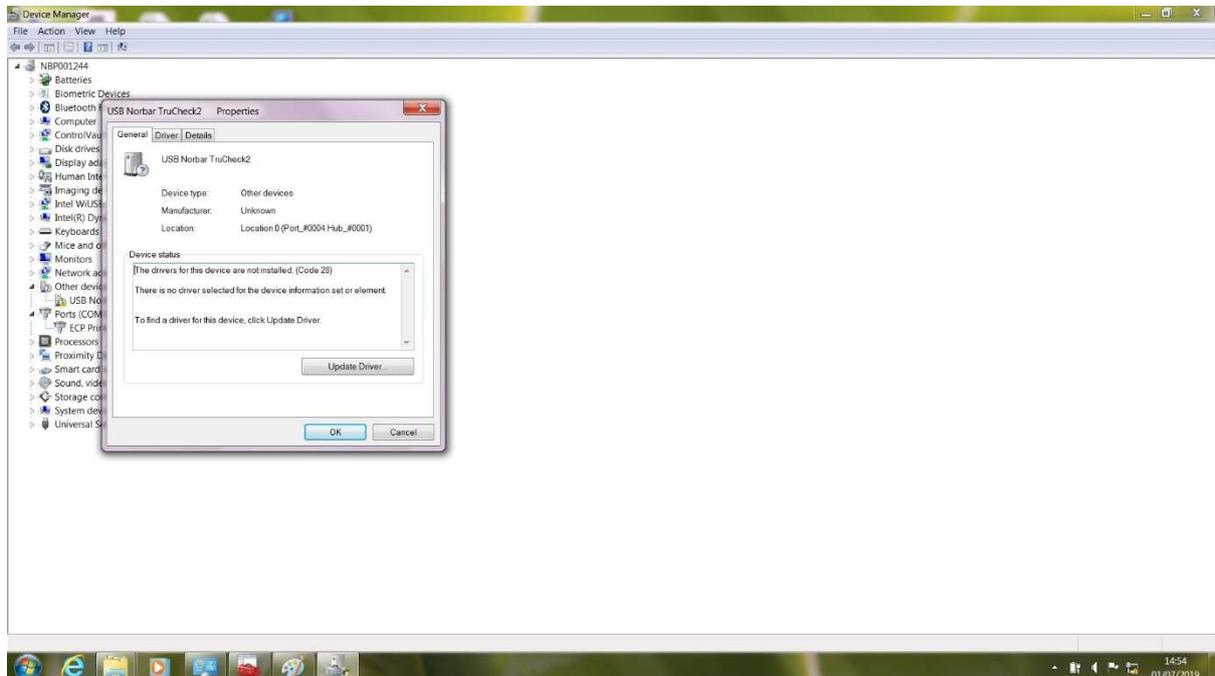


Select 'Browse my computer for driver software'

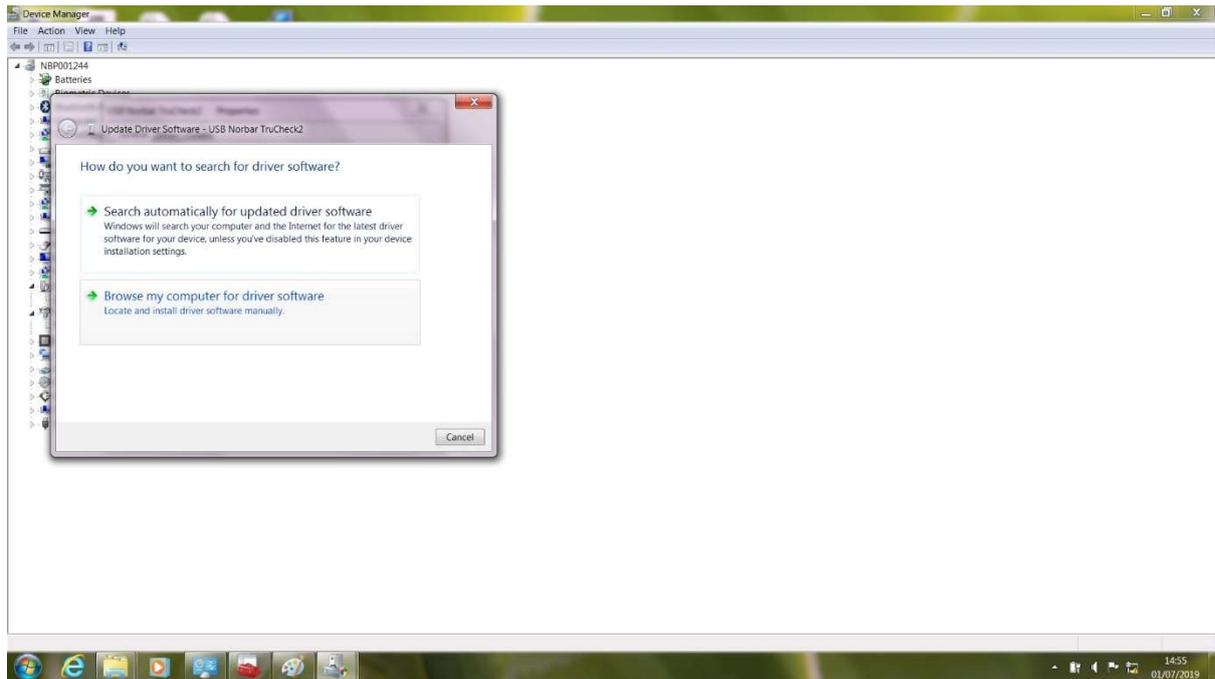


Select 'Browse' and navigate to 'C:/Windows/System32/Drivers'

Click Next

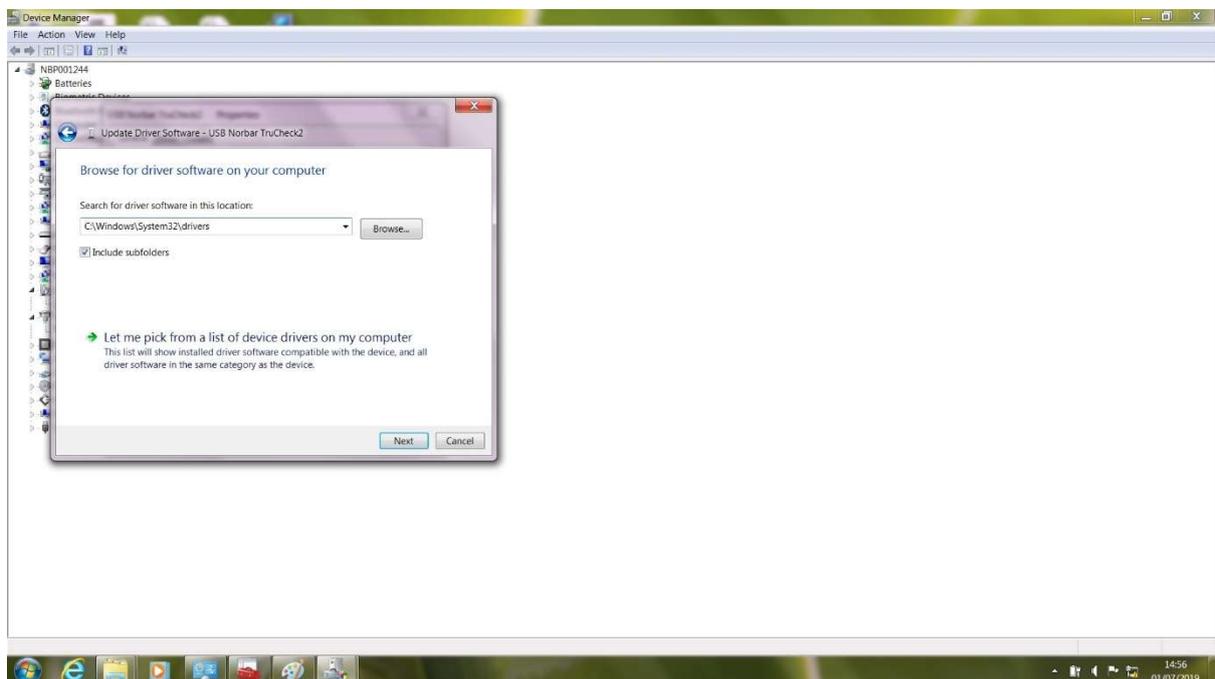

Select 'Install this driver software anyway'

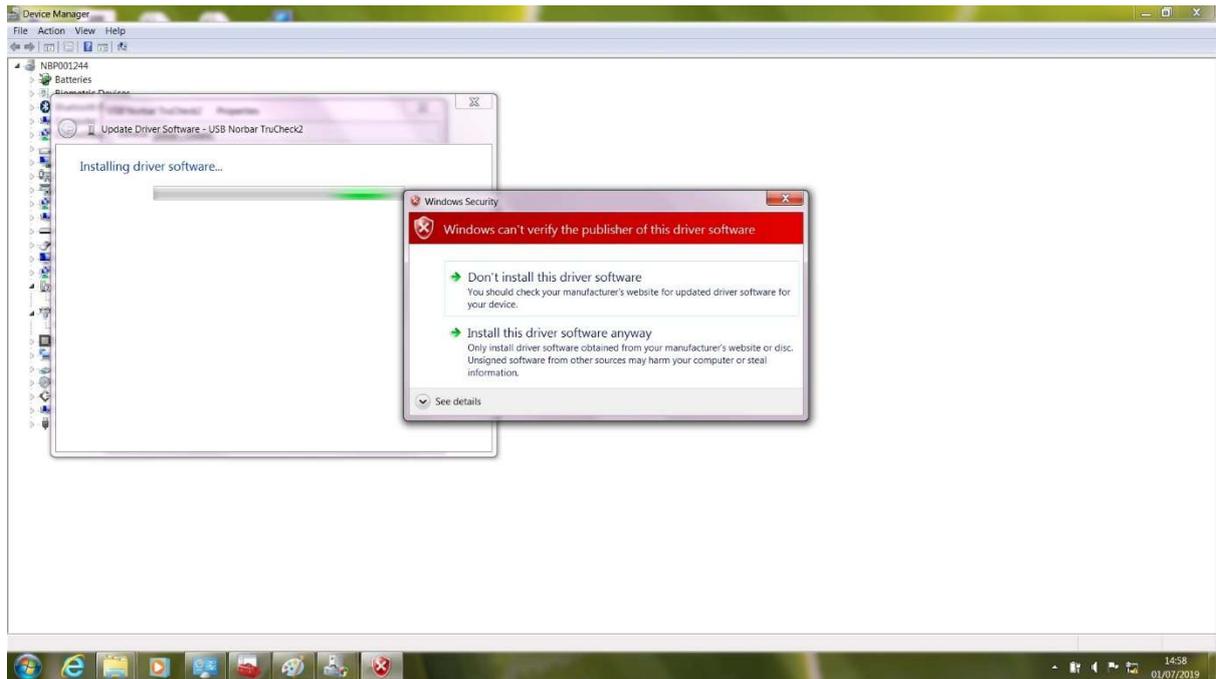

Trucheck2 should now appear as a Com port

